

eliwell

by Schneider Electric

EWPlus

961/971/971 SPDT/974



EN

Electronic controllers for refrigeration units

EWPlus 961/971/971 SPDT/974 USER INTERFACE



EWPlus 961



EWPlus 971/971 SPDT/974

KEYS



UP

Press and release

- Scrolls through menu items
- Increases values

Press for at least 5 secs

- Activates the Manual Defrost function



STAND-BY (ESC) - ON/OFF

Press and release

- Returns to the previous menu level
- Confirm parameter value

Press for at least 5 secs

- Activates the Stand-by function (when outside the menus)



DOWN

Press and release

- Scrolls through menu items
- Decreases values

Press for at least 5 secs

- Configurable function by user (par. H32)



SET (ENTER)

Press and release

- Displays alarms (if active)
- Opens the Machine Status menu

Press for at least 5 secs

- Opens the Programming menu
- Confirms commands


LEDs

	Reduced SET / Economy Permanently on: Energy Saving active Flashing: Reduced set active Quick flashing: Access to level 2 parameters Off: Otherwise		LED Aux Permanently on: Aux active Flashing: Deep Cooling cycle active Off: Aux not active (EWPlus 971/971 SPDT/974 Only)
	Compressor LED Permanently on: Compressor active Flashing: Delay, protection or Blocked start-up Off: Otherwise		Defrost LED Permanently on: Defrost active Flashing: Manual or D.I. activation Off: Otherwise
	Alarm LED Permanently on: Alarm on Flashing: Alarm acknowledged Off: Otherwise		Fan LED Permanently on: Fans active Off: Otherwise (EWPlus 971/971 SPDT/974 Only)
	°C LED Permanently on: °C setting (dro = 0) Off: Otherwise		°F LED Permanently on: °F setting (dro = 1) Off: Otherwise
	HEAT MODE LED Permanently on: compressor in HEAT mode Off: Otherwise (EWPlus 961 Only)		NOT USED (EWPlus 961 Only)

NOTE: When switched on, the device performs a Lamp Test; the display and icons will flash for several seconds to check that they all function correctly. After the lamp test, the label **CuS** and its value will be shown for 2 secs.

CONNECTIONS


EWPlus 961

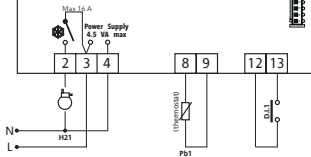

TERMINALS


2-3	Compressor relay - 
3-4	Power Supply input (115 Vac or 230 Vac)
N-L	Power Supply (115 Vac or 230 Vac)
8-9	Pb1 Probe
12-13	Digital Input D.I.1
TTL	TTL input

EWPlus 971

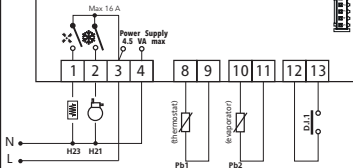


TERMINALS

1-3	Fans relay - 
2-3	Compressor relay - 
3-4	Power Supply input (115 Vac or 230 Vac)
N-L	Power Supply (115 Vac or 230 Vac)
8-9	Pb1 Probe
10-11	Pb2 Probe
12-13	Digital Input D.I.1
TTL	TTL input

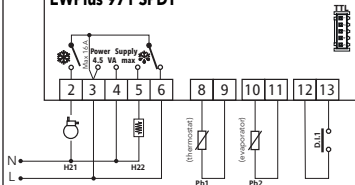EWPlus 971 SPDT**TERMINALS**

2-3	Compressor relay - ❄️
3-4	Power Supply input (115 Vac or 230 Vac)
N-L	Power Supply (115 Vac or 230 Vac)
3-5-6	Defrost relay - ❄️
8-9	Pb1 Probe
10-11	Pb2 Probe
12-13	Digital Input D.I.1
TTL	TTL input

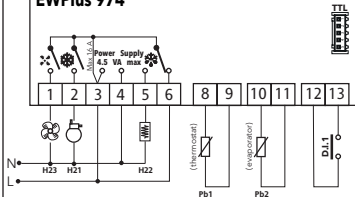EWPlus 974**TERMINALS**

1-3	Fans relay - 🌀
2-3	Compressor relay - ❄️
3-4	Power Supply input (115 Vac or 230 Vac)
N-L	Power Supply (115 Vac or 230 Vac)
3-5-6	Defrost relay - ❄️
8-9	Pb1 Probe
10-11	Pb2 Probe
12-13	Digital Input D.I.1
TTL	TTL input

ELECTRICAL WIRING



DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Disconnect all power from all equipment including connected devices, prior to removing any covers or doors, or installing or removing any accessories, hardware, cables, or wires.
- Always use a properly rated voltage sensing device to confirm the power is off where and when indicated.
- Replace and secure all covers, accessories, hardware, cables and wires.
- For all the devices where this is provided, confirm that a proper ground connection exists before applying power to the unit.
- Use only the specified voltage when operating this device and any associated products

Failure to follow these instructions will result in death or serious injury.

This device has been designed to operate outside of any hazardous location.
Only install this device in zones known to be free of hazardous atmosphere.



DANGER

LOOSE OR UN-INSULATED, EXPOSED WIRING CAUSES ELECTRIC SHOCK

- Insulate electrical connections with suitable Faston covers.
- Make sure the cables are properly connected to the female Fastons before continuing with the wiring process.

Failure to follow these instructions will result in death or serious injury.



DANGER

POTENTIAL OF OVERHEATING AND FIRE

- Do not use with loads other than those indicated in the technical specification.
- Do not exceed the maximum permitted current; for higher loads, use a contactor with sufficient power capacity.

Failure to follow these instructions will result in death or serious injury.



DANGER

POTENTIAL FOR EXPLOSION

Install and use this equipment in non-hazardous locations only.

Failure to follow these instructions will result in death or serious injury.

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel.

No responsibility is assumed by Eliwell for any consequences arising out of the use of this material.



WARNING

UNINTENDED EQUIPMENT OPERATION

- Use appropriate safety interlocks where personnel and/or equipment hazards exist.
- Install and operate this equipment in an enclosure appropriately rated for its intended environment.
- Power line and output circuits must be wired and fused in compliance with local and national regulatory requirements for the rated current and voltage of the particular equipment.
- Do not use this equipment in safety-critical machine functions.
- Do not disassemble, repair, or modify this equipment.
- Do not mount devices in extremely damp and/or dirt-laden areas.

Failure to follow these instructions can result in death, serious injury, or equipment damage

WARNING

UNINTENDED EQUIPMENT OPERATION DUE TO CONNECTION

Signal leads (probes, digital inputs, communication and the electronic supply) must be routed separately from power cables.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Probes (NTC) have no connection polarity and can be extended using a regular bipolar cable (note that the extension of the probes affects the EMC electromagnetic compatibility of the instrument: pay extreme attention to wiring).

TECHNICAL DATA (EN60730-2-9)

Classification:	Operating (Not safety) controls for incorporation
Mounting:	Panel mounting with 2.80x1.14 in (71x29 mm) drilling template
Control type:	1.B
Pollution rating:	2
Insulation material class:	IIIa
Overvoltage category class:	II
Nominal impulsive voltage:	2500 V
Temperature:	Operating: -20 ... 60 °C (-4 ... 140 °F) - Storage: -30 ... 85 °C (-22 ... 185 °F)
Power Supply:	115 Vac or 230 Vac ($\pm 10\%$) 50/60 Hz
Consumption:	4.5 VA max
Fire resistance class:	D
Software class:	A

NOTE: Check the power supply specified on the instrument label; for relay and power supply capacities, contact Sales office.

FURTHER INFORMATION

Input Characteristics

Display Range:	NTC: -50.0 ... 110 °C (-58.0 ... 230 °F) (on display with 3 digits + sign)
Accuracy:	Better than 0.5 % of full-scale + 1 digit
Resolution:	0.1 °C (0.1 °F up to 199; 1 °F beyond)
Buzzer:	YES (it depends on the model)
Analogue Inputs:	EWPlus 961: 1 NTC input - EWPlus 971/971 SPDT/974: 2 NTC inputs
Digital Inputs:	1 voltage-free D.I.

Output Characteristics

Digital
Outputs:

Model	Relay	EN60730 - 230 Vac	UL60730 - 115 Vac	UL60730 - 230 Vac	Cycles
EWPlus 961:	Compressor	12(8) A	16 FLA / 96 LRA	12 FLA / 72 LRA	100k
EWPlus 971:	Compressor	12(8) A	16 FLA / 96 LRA	12 FLA / 72 LRA	100k
	Fans / AUX	3(2) A	5 A resistive 2 FLA / 12 LRA	5 A resistive 2 FLA / 12 LRA	/
EWPlus 971 SPDT:	Compressor	12(8) A	16 FLA / 96 LRA	12 FLA / 72 LRA	100k
	Defrost	NO 8(4) A - NC 6(3) A	NO 8 A - NC 6 A NO 2.9 FLA / 17.4 LRA	NO 8 A - NC 6 A 2.9 FLA / 17.4 LRA	/
EWPlus 974:	Compressor	12(8) A	16 FLA / 96 LRA	12 FLA / 72 LRA	100k
	Defrost	NO 8(4) A - NC 6(3) A	NO 8 A - NC 6 A resistive NO 2.9 FLA / 17.4 LRA	NO 8 A - NC 6 A resistive NO 2.9 FLA / 17.4 LRA	/
	Fans	3(2) A	5 A resistive 2 FLA / 12 LRA	5 A resistive 2 FLA / 12 LRA	/

Mechanical Characteristics

Container:	Makrolon 6265x plastic casing, polycarbonate window, thermoplastic rubber keys
Dimensions:	Front 3.09x1.45 in (78.6x37 mm), depth 2.95 in (75 mm) (excluding terminals)
Terminals:	Faston terminals 0.25 in (6.3 mm), with pitch 0.2 in. (5.08 mm). Operating temperature of female connectors: 257 °F (125 °C) minimum, for cables with a 13 AWG (2.5 mm ²) section
Connectors:	-TTL (JST 05JQ-ST) for connection to UNICARD/DMI/Copycard/MFK (maximum length = 118 in - 3 m) -JST 2 ways with a diameter of 30 to 22 AWG (0.05 to 0.32 mm ²)
Humidity:	Operating / Storage: 10 ... 90 % RH (non-condensing)

Regulations

Food safety:	This device complies with standard EN 13485 as follows: - suitable for storage - application: air - climate range A - measurement class 1 in the range from -25 ... 15 °C (-13 ... 59 °F) (*) (* exclusively using Eliwell NTC probes)
--------------	---

Relays tested according to 33.5 of IEC 60079-15:2005



Approvals

UL60730	E233482
---------	---------

NOTE: The technical characteristics provided in this document concerning the measurement (range, accuracy, resolution, etc.) refer to the instrument itself only and not to any provided accessories, such as the probes.

MOUNTING - DIMENSIONS

The instrument is designed for panel mounting. Make a hole of 2.80x1.14 in (71x29 mm), insert the instrument and fix it using the brackets provided. Do not mount the instrument in humid and/or dirty places; it is suitable for use in ordinary polluted places. Ventilate the place in proximity to the instrument cooling slits.

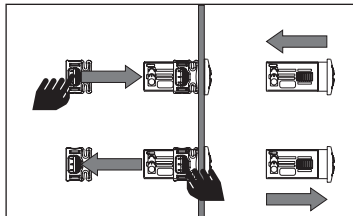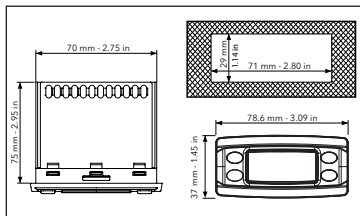

DIAGNOSTICS

Alarms are always indicated by the buzzer (if present) and the alarm icon (🔊). To switch off the buzzer, press and release any key, the relative icon will continue to flash.

NOTE: If alarm exclusion times have been set (see **AL** folder in the parameters table) the alarm will not be signalled.


ALARMS

Label	Description	Cause	Effects	Remedy
E1	Pb1 probe error (cold room)	• Reading of out of range operating values • Probe inoperable / short-circuited / open	• Display label E1 • Alarm icon permanently ON • Min/max alarm regulator disabled • Compressor operation according to Ont and Oft parameters.	• Check probe type (NTC) • Check the probe wiring • Replace probe
E2	Pb2 probe error (defrost)	• Reading of out of range operating values • Probe inoperable / short-circuited / open	• Display label E2 • Alarm icon permanently ON • The defrost cycle will end due to Time-out (Parameter dEt)	• Check probe type (NTC) • Check the probe wiring • Replace probe
AH1	Pb1 probe HIGH Temperature alarm	Value read by Pb1 > HAL after time of tAO . (see 'MAX/MIN TEMP. ALARMS')	• Registration AH1 label in the AL folder • No effect on regulation • Label AH1 displayed alternately with the actual value read by the probe Pb1	Wait until temperature value read by Pb1 returns below HAL .
AL1	Pb1 probe LOW Temperature alarm	Value read by Pb1 < LAL after time of tAO . (see 'MAX/MIN TEMP. ALARMS')	• Registration AL1 label in the AL folder • No effect on regulation • Label AL1 displayed alternately with the actual value read by the probe Pb1	Wait until temperature value read by Pb1 to come back above LAL
EA	External alarm	Digital input activated (H11 = ± 5)	• Registration EA label in the AL folder • Alarm icon permanently ON • Regulation blocked if rLO = y	Check and remove the external cause which generate alarm on D.I.
OPd	Door Open alarm	Digital input activated (H11 = ± 4) (for a longer time than tdO)	• Registration OPd label in the AL folder • Alarm icon permanently ON • Regulator blocked	• Close the door • Delay function defined by OAO


Label	Description	Cause	Effects	Remedy
Ad2	Defrosting for time-out	End of defrosting because of time instead of because of reaching the defrost end temperature detected by the Pb2 probe.	- Registration Ad2 label in the AL folder - Alarm icon permanently ON	Wait until the next defrost for automatic return

MAX/MIN TEMPERATURE ALARM

Relative Temperature Value to Setpoint (Att=1)

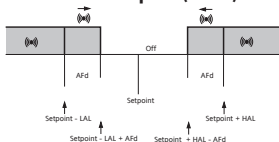

Absolute Temperature Value (Att=0)



Minimum temperature alarm

Temp. $\leq \text{Set} + \text{LAL} *$

Maximum temperature alarm

Temp. $\geq \text{Set} + \text{HAL} **$

Returning from minimum temperature alarm

Temp. $\geq \text{Set} + \text{LAL} + \text{AFd}$ or
 $\geq \text{Set} - |\text{LAL}| + \text{AFd}$ ($\text{LAL} < 0$)

Returning from maximum temperature alarm

Temp. $\leq \text{Set} + \text{HAL} - \text{AFd}$ ($\text{HAL} > 0$)

* if LAL is negative, $\text{Set} + \text{LAL} < \text{Set}$

** if HAL is negative, $\text{Set} + \text{HAL} < \text{Set}$

Temp. $\leq \text{LAL}$ (LAL with sign)

Temp. $\geq \text{HAL}$ (HAL with sign)

Temp. $\geq \text{LAL} + \text{AFd}$

Temp. $\leq \text{HAL} - \text{AFd}$

INSTRUMENT ON/OFF

The instrument can be turned off by pressing the button  for more than 5 seconds. In this condition, the instrument displays the message OFF.

ACCESSING AND USING THE MENU

Resources are organized into 2 menus which are accessed as explained below:

- **Machine Status** menu: press and release the  key.
- **Programming** menu: press for at least 5 secs the  key.

Either do not press any keys for 15 seconds (time-out) or press the  key once, to confirm the last value displayed and return to the previous screen.

PASSWORD

PA1 Password: It allows access to the 'User' parameters. In the standard configuration the password is disabled (**PA1** = 0).

To enable it (**PA1** ≠ 0) enter the **Programming** menu by pressing the  and  keys, scroll the parameters until **PS1** label is displayed, press the  key to display the current value, change it by using the  and  keys and then press the  key to save it. If the password is already enabled, you will be required to enter it to access the **Programming** menu. To enter it:

PA2 Password: It allows access to the **Installer** parameters.

- **EWPlus 961/971/971 SPDT:** In the standard configuration the password is disabled (**PA2**=0).
- **EWPlus 974:** In the standard configuration the password is enabled (**PA2**=15).

To change it press and hold  for longer than 5 seconds, scroll through the parameters using  and  until you see the label **PA2**, press , set the value '15' using  and , then confirm using . Scroll through the folders until you see the label **diS** and press  to enter. Scroll through the parameters with  and  until you see the label **PS2**, press  to display the value, change it using  and , then save it by pressing  or  keys. The visibility of the **PA2** label will be:

- 1) **If PA1 ≠ 0 and PA2 ≠ 0:** By pressing the  key for more than 5 seconds, **PA1** and **PA2** labels will be displayed at the same level and it will be possible to access either the level 1 or the level 2 parameters.
- 2) **Otherwise:** The **PA2** password is present between the level 1 parameters. If **PA2** is enabled, you will be required to enter it to access the level 2. To enter it follow the steps described for the **PA1** password.

NOTE: If the password is incorrect, the instruments display the **PA1/PA2** label and you will have to repeat the entry procedure.

MANUAL ACTIVATION OF THE DEFROSTING CYCLE

To manually activate the defrost cycle, hold down the  key for 5 seconds. If the defrost conditions are not satisfied:

- the parameter **Odo** $\neq 0$;
- the evaporator probe Pb2 temperature is higher than the defrost end temperature (**EWPlus 971/971 SPDT/974**).

The display will flash 3 times, to indicate that the operation will not be carried out.


SET POINT EDIT LOCK

It is possible to disable the keypad on this device. The keypad can be locked by programming the **LOC** parameter (See **dis** folder). With the keypad locked you can still access the 'Machine Status' menu by pressing  to display the Set point, but you cannot edit them. To disable the keypad lock, repeat the locking procedure.

'MACHINE STATUS' MENU

Access the 'Machine Status' menu by pressing and releasing the  key. If no alarms are active, the **SEt** label appears.

By pressing the  and  keys you can scroll all folders in the 'Machine Status' menu:



- **AL**: Alarms folder (**only visible if an alarm is active**);
- **SEt**: Set point setting folder;
- **Pb1**: probe 1 folder;
- **Pb2**: probe 2 folder (*);
- **APP**: **H60** parameter value folder.

(* **models EWPlus 971/971 SPDT/974 only**)

Setting the Set point: To display the Set point value press the  key when the **SEt** label is displayed. The Set point value appears on the display. To change the Set point value, press the  and  keys within 15 seconds. Press  to confirm the modification.

Probes display: When the Pb1 or Pb2 (*) label is displayed, press  and the associated probe value will appear (* Pb2 is only present on models **EWPlus 971/971 SPDT/974**).

'PROGRAMMING' MENU

To access the 'Programming' menu press for at least 5 secs the **set** key. If specified, the **PA1** for the **User** parameters and the **PA2** for the **Installer** parameters access PASSWORD will be requested (see Par. 'PASSWORD')

User parameters: At the access, the display will show the first parameter (**df1**). By pressing the **↵** and **⏏** keys you can scroll all parameters in the current level. Select the desired parameter using the **↵** and **⏏** keys. Press **set** to see the current value of the selected parameter. Press **↵** and **⏏** to change the value and then press **set** to save it.

Installer parameters: At the access, the display will show the first folder (**CP**). By pressing the **↵** and **⏏** keys you can scroll all folders in the current level. Select the desired folder using the **set** keys. Press **↵** and **⏏** to change the value and then press **set** to save it.

NOTE: switch the device off and on again each time the parameter configuration is changed.

USING THE UNICARD


The UNICARD must be connected to the TTL serial port and allows the rapid programming of instrument parameters. Access the 'Installer' parameters by entering **PA2**, then scroll through the folders with the **↵** and **⏏** until the **FPr** folder is displayed.

Press **set** to select the folder, scroll the parameters with **↵** and **⏏**, then press **set** to select the function (e.g. **UL**).

- **Upload (UL):** select **UL** and press **set**. This function uploads the programming parameters from the instrument to the card. If the operation is successful, the display will show **y**, otherwise it will show **n**.
- **Format (Fr):** this command is used to format the UNICARD (which is necessary when using the card for the first time).
NOTE: the Fr parameter deletes all data present. This operation cannot be reversed.
- **Download (dL):** Connect the UNICARD when the instrument is switched off. At power-on, data will automatically start downloading from the UNICARD to the instrument. At the end of the lamp test, the display will show **dly** if the operation was successful and **dLn** if not successful.

NOTES: After the parameters have been downloaded, the device uses the downloaded parameter map settings.

SMART DEFROST

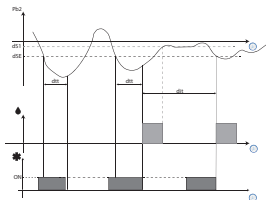

Smart defrost will activate if:


- Pb2 temperature < **dSE**;
- The compressor must be on for at least the time indicated by parameter **dt**.

In the case of a defrosting probe in error or not connected, smart defrost can be started automatically if **dit** > 0.

Smart defrost will not activate if:

- Pb2 temperature > **dS1**.

DISPLAY FILTER

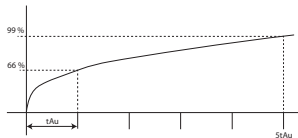

- **FIS** = 0 The filter is disable;
- **FIS** = 1 the filter is set in function of **tAu** and **5tAu**.
With the **Fit** parameter, the filter can be applied only when the temperature rise or both when the temperature rise (**Fit**=n(0)) or rise/fall (**Fit**=y(1)).
tAu it's the time that the display temperature takes to reach the 66 % of the final value, **5tAu** it's the time that the display temperature takes to reach the 99 % of the final value;
- **FIS** = 2, The temperature display change 1 °C / °F every **tAu** value.

LOADING DEFAULT APPLICATIONS

The procedure used to load one of the default applications is:

- when the instrument switches on, press and hold the **set** key: the label **AP1** will appear;;
- scroll through the various applications (**AP1-AP2-AP3**) using the **⏮** and **⏭** keys;
- select the desired application using the **set** key (**AP3** in the example) or cancel the procedure by pressing the **⏹** key or alternatively wait for the timeout;
- if the operation is successful, the display will show **y**, otherwise **n** will appear;
- after a few seconds the instrument will return to the main display.



LOADING APPLICATIONS WHEN EXITING STAND-BY MODE

The procedure for loading one of the preset applications when exiting stand-by mode is:

- set the instrument in stand-by mode by pressing the **⏹** button for time **H02**;
- exit stand-by mode by pressing the **⏹** button for time **H02**;
- within 10 seconds of exiting stand-by mode, press the **⏹** button for time **H02**: the **AP1** label will appear;
- scroll through the various applications (**AP1-AP2-AP3**) using the **⏮** and **⏭** keys;
- select the desired application using the **set** key (**AP3** in the example) or cancel the procedure by pressing the **⏹** key or alternatively wait for the timeout;
- if the operation is successful, the display will show **y**, otherwise **n** will appear;
- after a few seconds the instrument will return to the main display.

PARAMETERS TABLE

PAR.	LEV.	DESCRIPTION	M.U.	RANGE	DEFAULT VALUE TO MODELS			
					961	971	971 SPDT	974
SEt	/	Temperature SEtpoint.	°C/°F	LSE ... HSE	35.0	35.0	35.0	35.0
COMPRESSOR ('CP' folder)								
dF1	1&2	Relay compressor tripping differential. The compressor stops on reaching the Setpoint value (as indicated by the adjustment probe), and restarts at temperature value equal to the Setpoint plus the value of the differential. Note: dF1 ≠ 0.	°C/°F	0.1 ... 30.0	2.0	2.0	2.0	2.0
HSE	1&2	Maximum possible setpoint value.	°C/°F	LSE ... HdL	230	230	230	230
LSE	1&2	Minimum possible setpoint value.	°C/°F	LdL ... HSE	-55.0	-55.0	-55.0	-55.0
HC	2	Operating mode C (0)= Cooling; H (1) Heating.	flag	C/H	C	C	C	C
Cit	2	Minimum compressor output activation time.	min	0 ... 250	0	0	0	0
CAt	2	Maximum compressor output activation time.	min	0 ... 250	0	0	0	0
Ont	2	Compressor activation time in the event of inoperable probe. • If OFt =1 and Ont =0, the compressor is always off. • If OFt =1 and Ont >0 it operated in duty cycle mode.	min	0 ... 250	1	1	1	1
OFt	2	Compressor deactivation time if probe is inoperable. • If Ont =1 and OFt =0, the compressor is always on. • If Ont =1 and OFt >0 it operated in duty cycle mode.	min	0 ... 250	1	1	1	1
dOn	2	Delay time in activating the compressor relay after switch-on of instrument.	s	0 ... 250	0	0	0	0
dOF	2	Delay after switch off; the indicated time must elapse between switch-off of the compressor relay and the successive switch-on.	min	0 ... 250	0	0	0	0
dbi	2	Delay between switch-on; the indicated time must elapse between two successive switch-on of the compressor.	min	0 ... 250	0	0	0	0
OdO	2	Delay time in activating the outputs after switch-on of the instrument or after a power outage.	min	0 ... 250	0	0	0	0
dFA	2	Condenser fan and compressor activation delay from the call.	s	0 ... 255		0	0	0

PAR.	LEV.	DESCRIPTION	M.U.	RANGE	DEFAULT VALUE TO MODELS			
					961	971	971 SPDT	974
CP2	2	Second compressor step activation delay.	s	0 ... 255		0	0	
DEFROST ('dEF' folder)								
dtY	1&2	Type of defrosting. 0 = Electric defrost - compressor off (OFF) during defrosting; 1 = Reverse cycle defrost (hot gas); compressor on (ON) during defrosting; 2 = Free defrost; defrosting independently of compressor; 3 = Modulated- compressor off (OFF) during defrosting.	num	0 ... 3	0	0	0	0
dit	1&2	defrost interval time. Interval between the start of two successive defrosting operations.	hours	0 ... 250	6	6	6	4
dt1	2	Unit of measure for defrosting intervals (dit parameter). 0 = Hours; 1 = Minutes; 2 = Seconds.	num	0 ... 2	0	0	0	0
dt2	2	Unit of measure for defrosting duration (dEt parameter). 0 = Hours; 1 = Minutes; 2 = Seconds.	num	0 ... 2	1	1	1	1
dCt	2	Selection of count mode for the defrosting interval. 0 = Compressor operating hours (DIGIFROST® method); Defrosting active only if compressor is on; 1 = Real Time - equipment operating hours; defrost counting is always active when the machine is on and start every time the instrument switch on; 2 = Compressor stop. Each time the compressor stops a defrosting cycle is performed according to parameter dtY ; 3 = Temperature. Defrost is active when the Evaporator temperature it remain below the threshold of dSE parameters for dtT time; 4 = Smart. Defrost is active when the Evaporator temperature it remain below the threshold of dSE parameters for dtT time and the compressor is on; 5 = Demand. Defrost is active when the difference between evaporator temperature and regulation temperature is higher than dSE parameter for dtT time.	num	0 ... 5	1	1	1	1
dOH	2	Start-of-defrosting delay time from the call.	min	0 ... 59	0	0	0	0

PAR.	LEV.	DESCRIPTION	M.U.	RANGE	DEFAULT VALUE TO MODELS			
					961	971	971 SPDT	974
dEt	1&2	Defrosting time-out; determines duration of defrosting.	min	1 ... 250	30	30	30	30
dS1	1&2	End of defrosting temperature	°C/°F	-67.0 ... 320	45.0	45.0	45.0	45.0
dS2	2	End of defrosting temperature evaporator 2	°C/°F	-67.0 ... 320		50.0	50.0	
dPO	2	Determines if at the start-up the instrument must enter defrosting (if the temperature measured by the evaporator allows this operation). n (0) = No; y (1) = Yes (defrosts when switching on).	flag	n/y	n	n	n	n
tcd	1&2	Compressor output activation/deactivation time before defrosting	min	-31 ... 31	0	0	0	0
Cod	2	OFF compressor time before defrosting	min	0 ... 60	0	0	0	0
dSE	2	Temperature threshold for starting defrosting	°C/°F	-67.0 ... 320	-67.0	-67.0	-67.0	-30.0
dt	2	Time the evaporator temperature must remain below the threshold.	min	0 ... 255	0	0	0	0
EVAPORATOR FAN ('FAn' folder)								
FPt	2	Characterizes the FSt parameter that can be expressed or as an absolute temperature value or as a value related to Setpoint. 0 = Absolute; 1 = Relative.	flag	0/1			0	0
FSt	1&2	Fan lock temperature; if the value, read by the evaporator probe, is higher than the set value, fans stop.	°C/°F	-67.0 ... 320			100	50.0
FSS	*	Evaporator fan activation temperature difference. *EWPlus 971 SPDT: Parameter visible at level 2. EWPlus 974: Parameter visible at level 1&2.	°C/°F	0.0 ... 100			0.0	0.0
Fot	2	Evaporator fan activation temperature.	°C/°F	-67.0 ... 320			-50.0	-50.0
FAd	2	Fan starting differential (see par. FSt).	°C/°F	1.0 ... 50.0			2.0	2.0
Fdt	1&2	Delay time in activating fans after a defrost operation.	min	0 ... 250			0	0
dt	1&2	Dripping time.	min	0 ... 250		2	2	2
dFd	1&2	Allows to select the evaporator probes exclusion during defrost. n (0) = No; y (1) = Yes (fan disable).	flag	n/y			y	y

PAR.	LEV.	DESCRIPTION	M.U.	RANGE	DEFAULT VALUE TO MODELS						
					961	971	971 SPDT	974			
FCO*	2	Allows to select compressor fans lock OFF (switched off).		num	0...6			1	0		
		FdC	2							Evaporator fan shutoff delay after compressor deactivation.	
Fon*	2	Evaporator fan On time in cyclical regulator mode.		s x10	0 ... 250		0	0	6		
FoF*	2	Evaporator fan Off time in cyclical regulator mode.		s x10	0 ... 250		0	0	6		
Fnn	2	Evaporator fan On time in night mode (duty cycle).		s x10	0 ... 250		4	4			
FnF	2	Evaporator fan Off time in night mode (duty cycle).		s x10	0 ... 250		6	6			
* NOTA: if exceeding 100K cycles, please consult with Sales first.											
ALARMS ('AL' folder)											
Att	2	Allow you to select if the parameters HAL and LAL will have absolute (Att =0) or relative (Att =1) value.		flag	0/1	0	0	0	0		
AFd	2	Alarm differential.		°C/°F	1.0 ... 50.0	2.0	2.0	2.0	2.0		
HAL	1&2	Temperature value (in relative value) which if exceeded in an upward direction triggers the activation of the alarm signal.		°C/°F	LAL ... 320	50.0	50.0	50.0	50.0		

PAR.	LEV.	DESCRIPTION	M.U.	RANGE	DEFAULT VALUE TO MODELS			
					961	971	971 SPDT	974
LAL	1&2	Temperature value (in relative value), which if exceeded in a downward direction, triggers the activation of the alarm signal.	°C/°F	-67.0 ... HAL	-50.0	-50.0	-50.0	-50.0
PAO	2	Alarm exclusion time after instrument switch on, after a power outage.	minx10	0 ... 10	6	6	6	6
dAO	2	Temperature alarm exclusion time after defrost.	min	0 ... 999	0	0	0	60
OAO	2	Alarm signaling delay after digital input disabling (door close). Alarm is only for high-low temperature alarms.	minx10	0 ... 10	0	0	0	0
tdO	2	Alarm activation delay time open door.	min	0 ... 250	0	0	0	0
tAO	1&2	Temperature alarm signal delay time.	min	0 ... 250	0	0	0	0
dAt	2	Alarm for defrosting ended due to time out. n(0) = Alarm deactivated; y(1) = Alarm activated.	flag	n/y		n	n	n
rlO	2	External alarm locks the regulators n(0) = Don't lock regulators; y(1) = Lock regulators.	flag	n/y	n	n	n	n
AOP	2	Alarm output polarity. n(0) = Alarm activated and output disabled; y(1) = Alarm activated and output enabled.	flag	n/y	y	y	y	y
COOL PROTECTION ('CPr' folder)								
CPS	2	Cool protection set point.	°C/°F	-67.0 ... 320	-10.0	-10.0	-10.0	
CPd	2	Cool protection differential.	°C/°F	0.1 ... 30.0	1.0	1.0	1.0	
CPt	2	Temperature stay time below the cool protection set point.	min	0 ... 255	0	0	0	
DOOR SWITCH ('Lit' folder)								
dOd	2	Enabling of user shutoff upon activation of the door switch. 0 = Deactivated; 1 = Fan deactivated; 2 = Compressor deactivated; 3 = Fan and compressor deactivated.	num	0 ... 3	0	0	0	0
dAd	2	Digital input activation delay.	min	0 ... 255	0	0	0	0
dCO	2	Compressor deactivation delay from door opening.	min	0 ... 255	0	0	0	
dcd	2	Fan activation delay from door closing.	s	0 ... 250	0	0	0	
dSd	2	Aux output activation when door opened. n(0) = Does not activate AUX output; y(1) = Activates the AUX output.	flag	n/y	y	y	y	y

PAR.	LEV.	DESCRIPTION	M.U.	RANGE	DEFAULT VALUE TO MODELS			
					961	971	971 SPDT	974
PRESSURE SWITCH ('Pre' folder)								
PEn	2	Number of permitted errors per minimum/maximum pressure switch input	num	0 ... 15	0	0	0	
PEi	2	Minimum/maximum pressure switch error calculation interval.	min	1 ... 99	1	1	1	
PEt	2	Compressor activation delay after pressure switch deactivation.	min	0 ... 255	0	0	0	
DEEP COOLING ('dEC' folder)								
dCA	2	Deep cooling enabled. 0 = Deactivated; 1 = Manual (D.I.); 2 = Automatic.	num	0 ... 2	0	0	0	
dCS	1&2	Deep cooling set point.	°C/°F	-67.0 ... 320	-2.0	-2.0	-2.0	
tdC	1&2	Deep cooling duration.	min	0 ... 255	0	0	0	
dcc	2	Defrosting delay after deep cooling.	min	0 ... 255	0	0	0	
Sid	2	Deep cooling start threshold.	°C/°F	-67.0 ... 320	50.0	50.0	50.0	
toS	2	Time above the threshold for deep cooling start.	min	0 ... 255	5	5	5	
ENERGY SAVING ('EnS' folder)								
ESt	2	Type of action for the Energy Saving function. 0 = disabled (no effect to AUX output); 1 = AUX off; 2 = AUX on; 3 = Offset on setpoint and differential; 4 = 'Bottle cooler open front' algorithm; 5 = 'Bottle cooler glass door' algorithm.	num	0 ... 5	0	0	0	
ESA	2	AUX status during Energy Saving. 0 = disabled; 1 = AUX off; 2 = AUX on.	num	0 ... 2	0	0	0	
ESF	2	Night mode activation. n(0) = Disabled; y(1) =Enabled if energy saving mode is active (ESt ≠0).	flag	n/y	n	n	n	
Cdt	2	Door closure time.	minx10	0 ... 255	6	6	6	
OSP	2	Temperature Value to be added to the Set-Point if reduced set is enabled (Economy function).	°C/°F	-30.0 ... 30.0	3.0	3.0	3.0	3.0
OdF	2	Operation differential correction.	°C/°F	0.0 ...30.0	4.0	4.0	4.0	
dnt	2	Night mode duration.	hours	0 ... 24	11	11	11	
dFt	2	Fast cooling mode duration.	hours	0 ... 24	1	1	1	

PAR.	LEV.	DESCRIPTION	M.U.	RANGE	DEFAULT VALUE TO MODELS			
					961	971	971 SPDT	974
SPn	2	Night mode set point.	°C/°F	LSE ... HSE	38.0	38.0	38.0	
dn1	2	Night mode offset.	°C/°F	0.1 ... 30.0	4.0	4.0	4.0	
SPF	2	Fast cooling set point.	°C/°F	LSE ... HSE	30.0	30.0	30.0	
dFF	2	Fast cooling offset.	°C/°F	0.1 ... 30.0	1.0	1.0	1.0	
ESP	2	Virtual door regulator sensitivity.	num	0 ... 5	0	0	0	
dOt	2	Maximum door open time.	s	0 ... 255	0	0	0	
COMMUNICATION ('Add' folder)								
PtS	2	Protocol selection. t (0) = Televis; d (1) = ModBus.	flag	t/d	d	d	d	d
dEA	2	Device address in family (valid values from 0 to 14).	num	0 ... 14	1	1	1	1
FAA	2	Device family (valid values from 0 to 14). The FAA and dEA values represent the network address of the equipment and are indicated in the following format 'FF.DD' (where FF= FAA and DD= dEA).	num	0 ... 14	0	0	0	0
PtY	2	MODBUS parity bit. n (0) = None; E (1) = Even; o (2) = Odd.	num	n/E/o	n	n	n	n
StP	2	MODBUS stop bit. 1b (0) = 1 bit; 2b (1) = 2 bit.	flag	1b/2b	1b	1b	1b	1b
DISPLAY ('diS' folder)								
LOC	1&2	LOCK. Setpoint change shutdown. There is still the possibility to enter into parameters programming and modify these, including the status of this parameter to permit keyboard shutdown. n (0) = No; y (1) = Yes.	flag	n/y	n	n	n	n
PS1	1&2	PAssword 1. When enabled (PS1 ≠ 0) it constitutes the access key for level 1 parameters.	num	0 ... 250	0	0	0	0
PS2	2	PAssword 2. When enabled (PS2 ≠ 0) it constitutes the access key for level 2 parameters.	num	0 ... 250	0	0	0	15
ndt	2	View with decimal point. n (0) = No; y (1) = Yes (display with decimal).	flag	n/y	y	y	y	y

PAR.	LEV.	DESCRIPTION	M.U.	RANGE	DEFAULT VALUE TO MODELS			
					961	971	971 SPDT	974
CA1	1&2	Calibration 1. Positive or negative temperature value added to the value read by probe 1.	°C/°F	-12.0 ... 12.0	0.0	0.0	0.0	0.0
CA2	1&2	Calibration 2. Positive or negative temperature value added to the value read by probe 2.	°C/°F	-12.0 ... 12.0		0.0	0.0	0.0
CAI	2	Calibration activation. 0 = Only the temperature shown is modified; 1 = Only the temperature used by the regulators is modified; the display remains unchanged; 2 = Temperature displayed is modified, which is also the one used by the regulators.	num	0 ... 2	2	2	2	2
LdL	2	Minimum visible value.	°C/°F	-67.0 ... HdL	-55.0	-55.0	-55.0	-55.0
HdL	2	Maximum visible value.	°C/°F	LdL ... 320	230	230	230	230
ddl	1&2	Viewing mode during defrosting. 0 = Shows the temperature read by the room probe; 1 = Locks the reading on the temperature value read by room probe when defrosting starts, and until the next time the Setpoint value is reached; 2 = Displays the label def during defrosting, and until the next time the Setpoint value is reached.	num	0/1/2	1	1	1	2
Ldd	1&2	Display lock time out from end of defrosting.	min	0 ... 255	30	30	30	30
dro	2	Select °C or °F for displaying the temperature read by the thermostat probe. (0 = °C, 1 = °F). NOTE: the switch between °C and °F DO NOT modify setpoint, differential, etc. (for example set=10 °C become 10 °F)	flag	0/1	1	1	1	1
ddd	2	Selection of type of value to be displayed. 0 = Setpoint; 1 = Pb1 probe; 2 = Pb2 probe; 3 = Not used.	num	0 ... 3	1	1	1	1
FiS	2	Filter selection. (See ' DISPLAY FILTER '). 0 = Filter disable; 1 = Filter use tAu and 5tAu ; 2 = Filter use only tAu .	num	0 ... 2	2**			

PAR.	LEV.	DESCRIPTION	M.U.	RANGE	DEFAULT VALUE TO MODELS			
					961	971	971 SPDT	974
Fit	2	Filter mode. n (0) = Active only when the temp. rise; y (1) = Always active (rise and fall).	flag	n/y	n**			
tAu	2	Filter time constant.	min	0 ... 250	20**			
** Parameter not present in vectors								
CONFIGURATION ('CnF' folder): Switch the device off and on again each time the parameter configuration is changed.								
H02	2	Function activation time from keypad.	s	0 ... 15	3	3	3	3
H06	2	Instrument off active light/auxiliary digital input or key n (0) = Deactivated; y (1) = Activated.	flag	n/y	y	y	y	y
H08	2	Stand-by operating mode. 0 = Display switch off; 1 = Display switch off, loads and alarms stopped; 2 = Display with OFF label, loads and alarms stopped.	num	0/1/2	2	2	2	2
H11	2	Configuration of digital inputs/polarity. 0 = Disabled; ±1 = Defrosting; ±2 = Reduced set; ±3 = AUX; ±4 = Door switch; ±5 = External alarm; ±6 = Stand-by (ON-OFF); ±7 = Pressure switch; ±8 = Deep cooling; ±9 = Energy saving; ±10 = Door switch + Energy saving. NOTE: -The '+' sign indicates that the input is activated when the contact is closed. -The '-' sign indicates that the input is activated when the contact is open.	num	-10 ... 10	0	0	0	0

PAR.	LEV.	DESCRIPTION	M.U.	RANGE	DEFAULT VALUE TO MODELS			
					961	971	971 SPDT	974
H21	2	Digital output 1 configurability. 0 = Disabled; 1 = Compressor; 2 = Defrost; 3 = Fan; 4 = Alarm; 5 = AUX; 6 = Stand-by; 7 = Not used; 8 = Condenser fan change rotation; 9 = Retain valve; 10 = 2nd evaporator defrost; 11 = 2nd compressor; 12 = Drip pan Heaters.	num	0 ... 12	1	1	1	1
H22	2	Configurability of digital output 2. Same as H21	num	0 ... 12			2	2
H23	2	Configurability of digital output 3. Same as H21 .	num	0 ... 12		3	3	3
H31	2	UP key configurability. 0 = Disabled; 1 = Defrost; 2 = AUX; 3 = Reduced set; 4 = Stand-by; 5 = Deep cooling; 6 = Energy saving	num	0 ... 6	1	1	1	1
H32	2	DOWN button configurability. Same H31	num	0 ... 6	0	0	0	0
H33	2	ESC key configurability. Same H31 .	num	0 ... 6	4	4	4	4
H41	2	Cell probe present. n (0) = Not present; y (1) = Present.	flag	n/y	y	y	y	y
H42	1&2	Evaporator probe present. n (0) = Not present; y (1) = Present.	flag	n/y		y	y	y
H45	2	Defrosting input mode for applications with dual evaporator. 0 = Only first evaporator; 1 = If at least one of the evaporators is below its end of defrost temperature; 2 = Only if both evaporators are below the respective end defrost temperature; 3 = 1st evaporator and 2nd evaporator activated alternately.	num	0 ... 3	0	0	0	
H60	2	Parameter vector selector: read only parameter.	num	0 ... 2	1	1	1	


PAR.	LEV.	DESCRIPTION	M.U.	RANGE	DEFAULT VALUE TO MODELS			
					961	971	971 SPDT	974
reL	1&2	Device version: read only parameter.	/	/	/	/	/	/
tAb	1&2	Reserved: read only parameter.	/	/	/	/	/	/
CuS	1&2	Customer model code	num	0 ... 999	1	1	1	1
COPY CARD / UNICARD ('Fpr' folder)								
UL	2	Upload. Programming parameter transfer from instrument to UNICARD.	/	/	/	/	/	/
Fr	2	Erasing all data in the UNICARD.	/	/	/	/	/	/

ACCESSORIES



Plexiglas protection for controllers:

- Protects the facade in external areas or those that are particularly dirty.



Silicon seal to protect against humidity:

- Increases the protection of the controller against humidity and dirty.



Ant-drip protection at the back:

- Protects electric connectors against dripping liquids.

RESPONSIBILITY AND RESIDUAL RISKS

In addition to the exclusions provided in the Warranty terms, ELIWELL CONTROLS SRL shall not be liable for any damages deriving from:

- Installation and/or use other than that prescribed and, in particular, that does not comply with applicable regulatory and safety standards, including the standards provided herein;
- Installation and/or use on boards which do not guarantee adequate protection against electric shock, water, dust, or access to dangerous parts;
- Installation and/or use on boards that do not comply with applicable regulatory and safety standards;
- tampering with and/or alteration of the products.

CONDITIONS OF USE

Permitted use

For safety reasons the instrument must be installed and used according to the instruction provided and in particular, under normal conditions, parts bearing dangerous voltage levels must not be accessible. The device must be adequately protected from water and dust as per the application and must also only be accessible via the use of tools (with the exception of the frontlet).

The device is ideally suited for use on household appliances and/or similar refrigeration equipment and has been tested with regard to the aspects concerning European reference standards on safety.

Unpermitted use

Any other use other than that permitted is de facto prohibited. It should be noted that the relay contacts provided are of a practical type and therefore subject to fault. Any protection devices required by product standards or dictated by common sense due to obvious safety reasons should be applied externally.

DISCLAIMER

This manual and its contents remain the sole property of ELIWELL CONTROLS SRL, and shall not be reproduced or distributed without the written permission of an authorized representative of ELIWELL CONTROLS SRL.

Although considerable care has been exercised in the preparation of this document, Invensys Controls, its employees, agents, vendors, and any other third parties cannot and do not accept any liability whatsoever in connection with its use, preparation, editing, or any misprints and errors contained herein. ELIWELL CONTROLS SRL reserves the right to make changes to this document at any time without prior notice.

DISPOSAL

The appliance (or the product) must be disposed of separately in compliance with the local standards in force on waste disposal.

Eliwell Controls s.r.l.

Via dell'Industria, 15 - Z.I. Paludi
32010 Pieve d'Alpago (BL) ITALY

T: +39 0437 986 111

F: +39 0437 989 066

www.eliwell.com

Technical Customers Support:

T: +39 0437 986 300

E: Techsuppeliwell@schneider-electric.com

Sales:

T: +39 0437 986 100 (Italy)

T: +39 0437 986 200 (Other countries)

E: saleseliwell@schneider-electric.com

U.S. Headquarters:

200 North Martingale Rd
Suite 1000

Schaumburg, IL 60173

www.eliwellusa.com

Technical Customers Support:

T: (855) 574 - 9484

E: techsupport.EliwellUSA@schneider-electric.com

Sales:

T: (855) 574 - 9214

EliwellUSA@schneider-electric.com



cod. 9IS54458 - EWPlus 961/971/971 SPDT/974 NA - EN - rel. 05/17

© Eliwell Controls s.r.l. 2017 • All rights reserved.